



TETON Tent Setup Instructions

Unfold the tent and spread it out in the desired position. Stake out the corners of the floor- firm but not tight. Put in the rest of the stakes between the corners.

CENTER POLE:

Assemble the pole and insert the long pin through the inside harness and grommet in the center of the roof. Push the pole up raising the tent, and place the butt of the pole in the center of the tent.

DOOR POLE AND REAR WALL POLE:

Assemble the pole and insert the long pin through the inside harness and grommet at the top of the door. Push the pole up raising the tent, and place the butt of the pole in the center of the door end. Attach the guy rope to the metal ring on the door canopy flap and guy out the door pole with the rope & stake. Do the same for the rear wall.

EXTERIOR SIDE POLES:

Insert the side poles through the metal grommet at each corner and center of the tent sides. Tie the guy rope to the black plastic d-ring. See the diagram below for stake placement. Guy out the corners with the rope & stake.

TETON MODEL

10 x 10

Features:

- Stove Shield With Flap
- 2 Screen Windows with Adjustable Flaps
- Heavy Duty Vinyl Floor
- Durable, Breathable Cotton Duck - Water & Mildew Retardant- 10.10 oz. / sq. yard
- Poles, Stakes & Ropes Included

Flame Retardant	Yes	<input type="radio"/>
	No	<input type="radio"/>

For Warranty repair or information please call 800-544-1039

