


Cook Shack and Porch Guidelines

Both the cook shack and porch are designed to overlap the main tent by 12 inches. The edge with openings at the top of the walls is the overlap edge. There is a draw rope laced through the grommets to snug down the porch over the main tent. The ends of the rope get staked to the ground. Extend the corner guy rope on each side of the tent through the side openings and re-secure. The Porch or Cook Shack frame should be setup immediately in front of your main tent. With the Porch or Cook shack overlapping the tent and riding on the frame, guy out the eve ropes to tension the fabric.

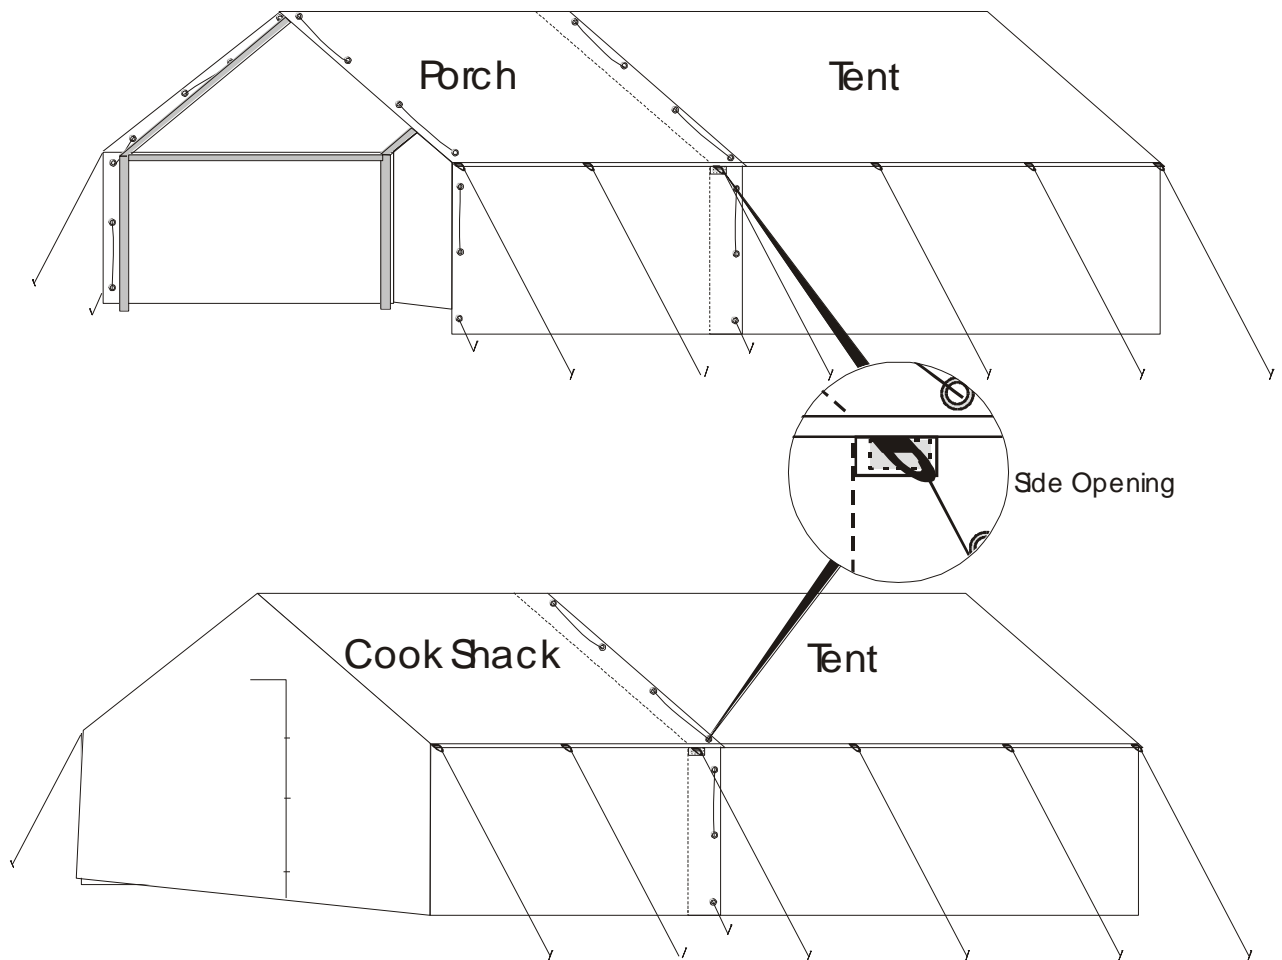

For Warranty repair or information
please call 800-544-1039