



How to Set Up Your Glacier Tent

1. Assemble all the poles. This is what you will have:

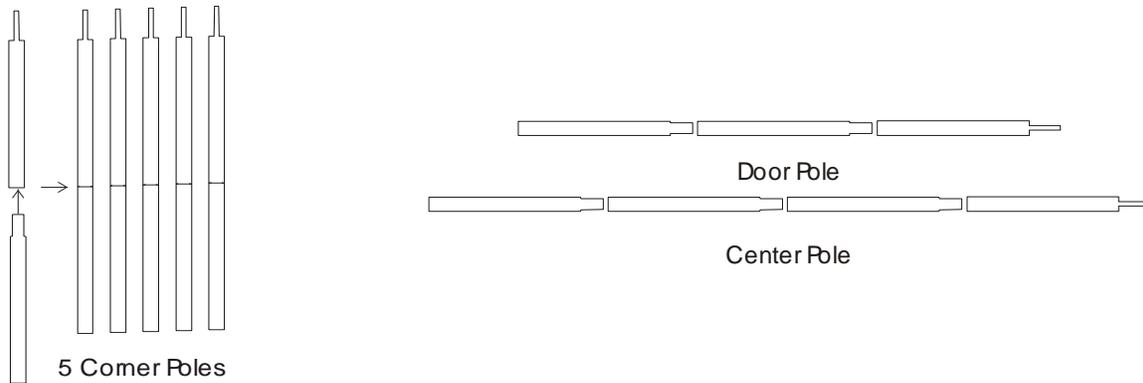

2. Unfold the tent, top side up. If using a stove, the flap should be rolled up and secured. Drive the spike provided through the grommet in the peak of the tent at the point you want the center of the tent to be. Be careful not to puncture any fabric that may be laying under the grommet. Loop one end of the web strap, which you will find in a pocket inside the tent bag, over the spike. Stretch the strap out to where you want the door. Match the stake loop at the door corner to the end of the web strap.

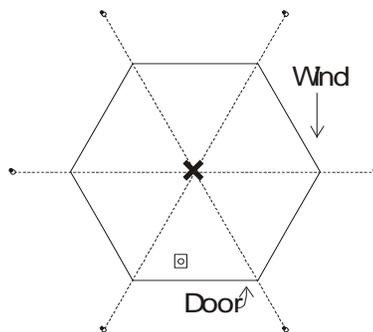

3. Keeping the web strap taut, drive a stake through the stake loop at that point. Move to the next corner stake loop. Using the web strap to measure the distance from the center and keeping the tent wall tight from the last stake, drive the next corner stake. Continue to the remaining corners in this fashion. Adjust the corner stakes if needed. Remove the spike from the grommet at the center of the tent.

4. Attach the guy ropes to the eave D-rings. The door corner rope is longer than the others. Run the rope through each hole of a tightener and tie an overhead knot in the tag end of the rope.

5. Determine the position of guy rope stakes by measuring diagonally outward with a corner pole. Drive in the six steel guy rope stakes taking care that they line up diagonally across with the corners of the tent.

6. Set the corner poles from the outside by sliding them under the tent. Insert the pin end into the harness then through the grommet. Stand the poles up and guy them out loosely. The door pole should be set up last. Unzip the door for easy access. ***IMPORTANT*** Double Check that the poles are inserted through the pole harness ring, not merely through the brass grommet.

7. Set the center pole. Insert the pin end into the harness and raise the center of the tent by pushing it up with the pole.

8. Tighten up the corner guy ropes.