

TETON Tent Setup Instructions



TETON MODEL
10 x 10

Features:

Stove Shield With Flap

2 Screen Windows with Adjustable Flaps

Heavy Duty Vinyl Floor

Durable, Breathable Cotton Duck - Water & Mildew Retardant-

9.5 oz. / sq. yard

Poles, Stakes & Ropes Included

Flame Retardant

Yes

No

Unfold the tent and spread it out in the desired position. Stake out the corners of the floor- firm but not tight. Put in the rest of the stakes between the corners.

CENTER POLE:

Assemble the pole and insert the long pin through the inside harness and grommet in the center of the roof. Push the pole up raising the tent, and place the butt of the pole in the center of the tent.

DOOR POLE:

Assemble the pole and insert the long pin through the inside harness and grommet at the top of the door.. Push the pole up raising the tent, and place the butt of the pole in the center of the door end. Attach the guy rope to the metal ring on the door canopy flap and guy out the door pole with the rope & stake.

CORNER POLES:


Insert the side poles through the metal ring at each corner of the tent. Tie an overhand loop in the end of each guy rope and loop it over the pin of the corner pole. Guy out the corner with the rope & stake. You may wish to use additional side poles to hold up the side walls.




CENTER POLE (5 sections)



DOOR POLE (4 sections)

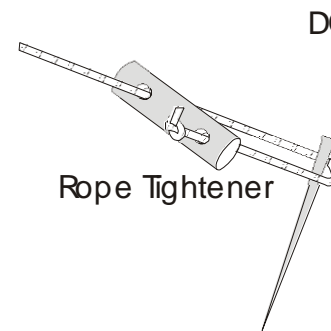

Rope Tightener

 

4-CORNER POLES

