



Shown with optional rain fly

CASCADE MODEL

12 x 9

Features:

- 2 Large Screen Windows with Adjustable Flaps
- Screen Door with Heavy Duty 3-way Zipper
- Door Flap with Heavy Duty 3-way Zipper
- Heavy Duty Vinyl Floor
- Durable, Breathable Cotton Duck- Water & Mildew Retardant- 10.10 oz. / sq. yard
- Poles and Stakes Included

Flame Retardant

Yes

No



CASCADE TENT SET UP INSTRUCTIONS

Position the tent and stake out the four corners. Add the stakes between the corners next. Do not make the floor excessively tight, as it will put undue strain on the loops and eventually damage them.

Assemble the poles as in fig. 1.

Slip the assembled eave poles through the large web loops at the eaves of the tent. Insert the pin end of the leg uprights through the holes at the ends of the eave poles. Hook the bungee loops at each eave corner and peak over the protruding pin ends of the legs. Stand the leg poles up at an angle and insert the wire pins that are located on the bottom hem of the tent into the bottom of the leg poles. Fig. 2.

Finally, repeat the above procedure with the ridge pole by slipping it through the three loops on the ridge line. Insert the upright pin ends through holes in the ends of the ridge pole. Hook the web loops over the pin ends.. The ridge uprights should be lifted to a vertical position. There are no wire pins for the ridge uprights.

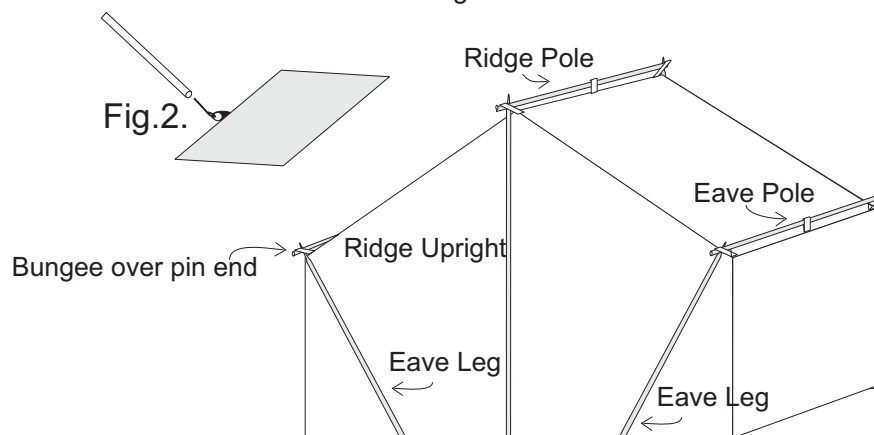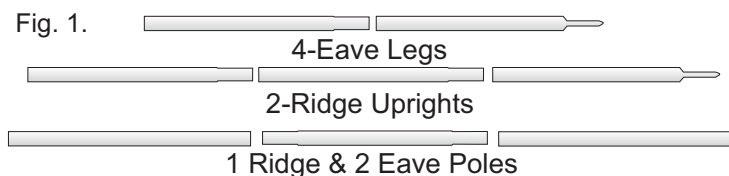

****Caution: This tent is not suitable for use in snow.****