

YELLOWSTONE AND GLACIER TENT FLY INSTRUCTIONS

Put a plastic clip on each tent guy rope, placing it between the D-ring on the tent and the sliding rope tightener.

The top section of the center pole, when a fly is used, is the one that has two holes in the pin end. Put it through the center harness and grommet of the tent. Put one hitch pin through the lower hole as shown below, place the center grommet of the fly over the pole and put the other hitch pin through the top hole in the pole. Position the fly so the stove hole in the tent and the stove hole on the fly match up.

Set up the tent to the point where the corner poles are standing in place. Stand the center pole in place and then the intermediate side poles. Put The plastic fittings on the tops (pin ends) of the side poles, including the door pole. (Plastic caps go on the corner poles on the 15 x 12 Yellowstone and the fly ties to a D-ring at the door).

Snap the hooks on the fly into the second hole of the plastic tighteners.

