



# Backyard Tipi Setup Instructions

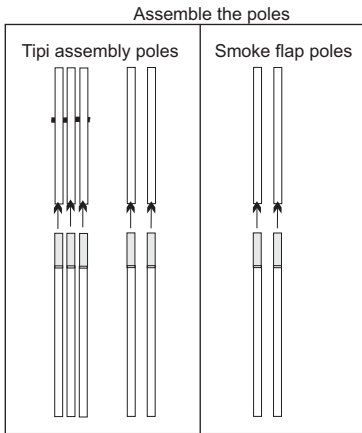


1




2

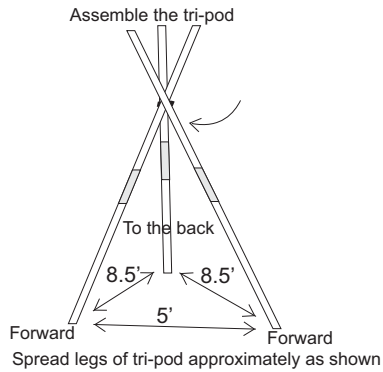


3

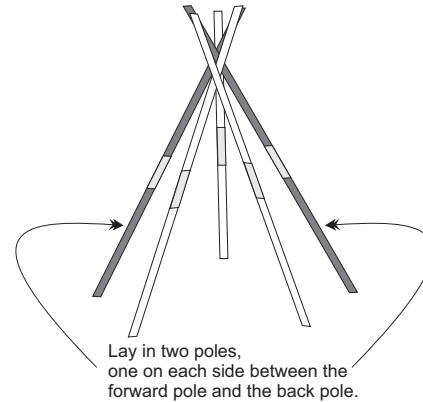

4

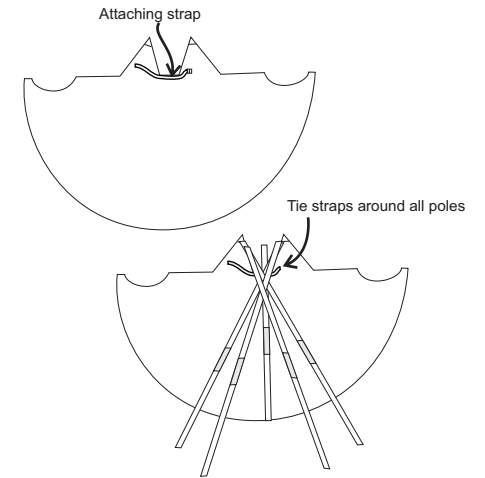

5

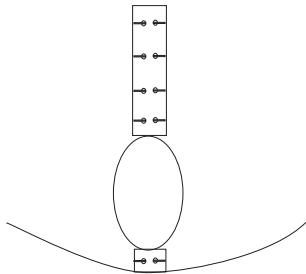

Wrap the cover around the poles so that they overlap above the oval door opening. Align the lace pin holes on the top piece with the corresponding holes on the lower piece. Insert the lacing pins into one set of holes and back through the set of holes on the opposite side. Repeat with the holes at the bottom of the door opening or if you prefer not having a threshold, this pin can be left out.

6



Slide the remaining two poles into the smoke flap pockets as shown above. The base of the two smoke flap poles will rest on the ground as shown above.

Note: You can open and close the smoke flaps by adjusting the position of the base of the smoke flap poles

Stake down the bottom of the cover and adjust the poles as needed.

