


# Backyard Tipi Setup Instructions


1

Assemble the poles




2


Assemble the tri-pod

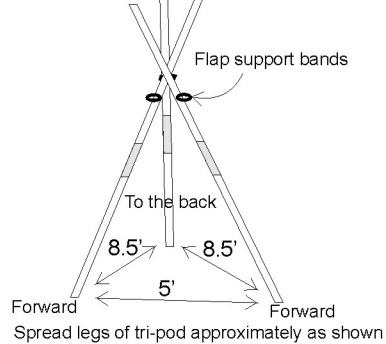


3

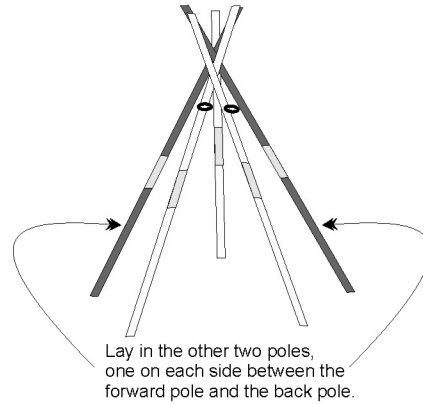

4

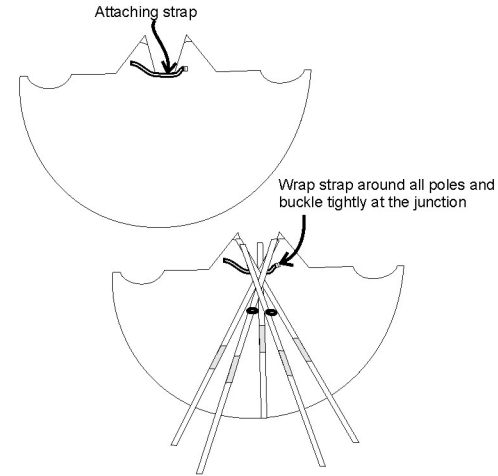


5

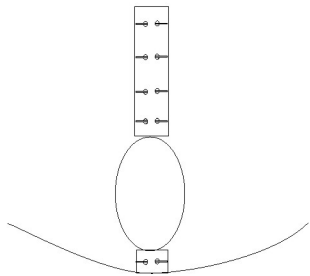

Wrap the cover around the poles so that they overlap above the oval door opening. Align the lace pin holes on the top piece with the corresponding holes on the lower piece. Insert the lacing pins into one set of holes and back through the set of holes on the opposite side. Repeat with the holes at the bottom of the door opening or if you prefer not having a threshold, this pin can be left out.

6

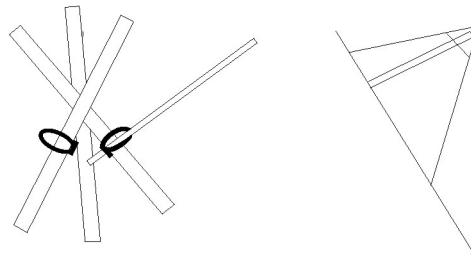

Place the smoke flap dowel through the rubber rings on two tri-pod poles and then slide the end of the dowel into the pocket on the corner of the smoke flap.

After the dowels are slid into the rubber rings you may need to secure the back ends to the rear tri-pod pole. This can be done with a large rubber band.

Stake down the bottom of the cover and adjust the poles as needed.

